


PART 01

Remote Controller Instruction



Button Function

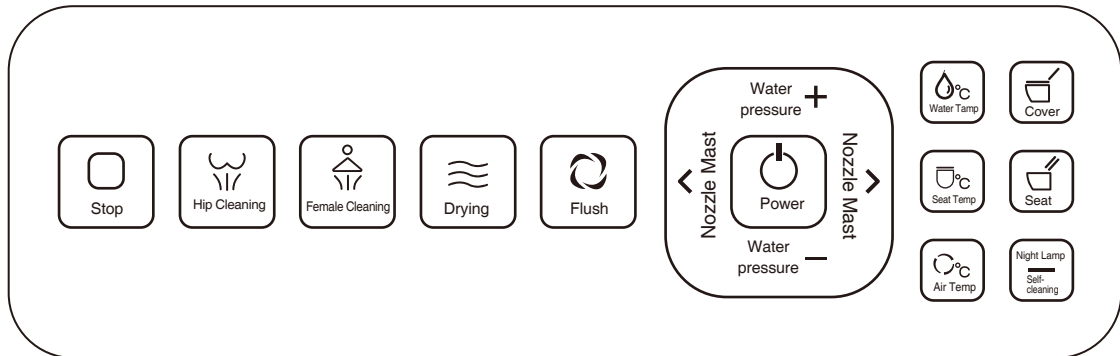

STOP

stop flush, female cleaning, hip cleaning, drying etc.



HIP CLEANING

Press once start hip cleaning, press again start moving hip cleaning, stop automatically after 1min.



FEMALE CLEANING

Press once start feminine cleaning, press again start moving feminine cleaning, stop automatically after 1min.



DRYING

Press once start drying, and will stop automatically after 3mins



FLUSH

Press once, Full flushing. Long press: The buzzer sounds once to turn off the off seat automatic flushing, sounds twice to turn on the off seat automatic flushing



POWER

Standby/setting, press again starting



NOZZLE MAST

Move forward (Spray nozzle position adjustment)during cleaning



NOZZLE MAST

Move backward(Spary nozzle position adjustment) during cleaning



WATER PRESSURE+

Increase the volume of water during cleaning



WATER PRESSURE-

Reduce the volume of water during cleaning



WATER TAMP

Adjust water tamperature, 4 leavels from off, 34°C, 37°C, 40°C in cycle.



SEAT TEMP

Adjust seat tamperature, 4 leavels from off, 34°C, 37°C, 40°C in cycle.



AIR TEMP

Adjust air tamperature, 4 leavels from off, 34°C, 37°C, 40°C in cycle.



COVER

Press once open toliet cover, press again close cover.



SEAT

Press once open toilet seat, press again close toilet seat.



NIGHT LAMP/SELF-CLEANING

WHEN IN SEAT

- Press once: Ambient lighting on/off
- Long Press: Add a foam shield

WHEN LEAVE SEAT

- Press once: Night light on/off
- Long press: Nozzle self cleaning

POWER SETING

Press the "**POWER**" button in the startup state to enter the setting mode. At this time, the screen will not display. After the setting is completed, press the "**POWER**" button again to successfully set it up


- ① Pre-wetting: Press "Female cleaning", 1 beep to turn off, 2 beeps to turn on
- ② Auto flush when Lid auto close: Press "cover", 1 beep to turn off, 2 beeps to turn on
- ③ Adjusting Lid/seat Opening Force: : Press "Nozzle Mast <" (Near flush) gradually adjust the cover opening force, 0-14, "Nozzle Mast >" (Near the "seat temp") to adjust the Seat opening force 0-14
- ④ Adjust the sensing distance of the lid: Press "Cover", then press "Nozzle Mast >" (Near the "Seat Temp" to adjust the distance for opening cover. (U0--turn off the auto opening , U1 to U5, 20cm-100cm 0.6ft-3 ft)
- ⑤ Flushing time adjust: Press "Flush", "Nozzle Mast<" to reduce and "Nozzle Mast >" to increase the flushing time 51-54
- ⑥ Auto Foam shield(If this model supports); Long press "Flushing" , 1 beep to turn off, 2 beeps to turn on

PART 02

Introduction to Toilet Button Functions



Female wash



Stop / power off



hip wash

WHEN IN SEAT

- **Rotate counterclockwise to the end**
Start female wash 90 seconds, then after 5 seconds flush and start drying
- **Rotate clockwise to the end**
Start hip wash 60 seconds, then after 5 seconds, flush and start drying
- **Press once**
flush and start drying

WHEN OFF SEAT

- **Press once**
Flush
- **Press and Hold**
Power outage flush
- **Rotate clockwise to the end and hold**
hear a buzzing sound
Long press the stop on the remote to pair with the remote and smart toilet
The remote is pre-paired when it leaves the factory. If the remote doesn't work after installing batteries or if you have a new remote, you need to pair it.

PART 03 Voice command

- Use “hello toilet” Wake up voice function (requires model support)
- Within 30 seconds after waking up, there is no need to wake up again. You can speak commands continuously, but you need to wake up again after 30 seconds

VOICE FUNCTION OF TOILET

1	Voice Command	Function Description
2	Hello Toilet	Wake Up The Toilet
3	Open /close The Lid	Open /close The Lid
4	Open /close The Seat	Open /close The Seat
5	Full Flush	Full Flush
6	Start / Close Cleaning	Start / Stop Hip Wash
7	Start/ Close Drying	Start/ Stop Drying
8	Switch On/ Off The Power	Turn On / Off The Power
9	Turn On/ Off The Night Light	Turn On/ Off The Night Light
10	Increase/ Reduce The Water Temperature	Increase/ Reduce The Cleaning Water Temperature
11	Increase/ Reduce The Seat Temperature	Increase/ Reduce The Seat Temperature
12	Increase/reduce The Wind Temperature	Increase/reduce The Drying Wind Temperature
13	Increase/reduce The Water Power	Increase/reduce The Cleaning Water Pressure
14	Front Clean	Start Female Cleaning
15	Clean The Nozzle	Start Clean The Nozzle(Self-clean)
16	Move Clean	Start Moving Clean Mode
17	Turn Up/ Down The Volume	Increase / Decrease The Volume
18	Open/ Close The Bubble	Start / Stop A Foam Shield

PART 04

Use of foam shield



01.

Put 3 foam agents into the foam bottle



02.

fill it with tap water



03.

and then connect the blue foam pipe cover behind the toilet.



04.

Place the foam bottle on the floor next to or behind the toilet to use.

Three foam can be used about 200 times. Please scan the QR code on the toilet lid to purchase the special foam agent.



05.

When the foam is used up and the foam is not obvious, please add new foam agent

PART 05

Technical Specification

Model		
Toilet	Rated Voltage	110-120vac,50/60hz
	Rated Power	1300w
	Waterproof Level	Ipx4
	Water Supply Mode	Waterway Directly Connection
	Power Cord	1.5m
	Flush Mode	Siphonic Jet
	Flush Volume	1.28 Gpf
	Water Pressure	0.14-0.8mpa
Cleaning	Water Temperature	4-level Adjustable
	Nozzle Mode	Hip Washing/moving Washing; Women Washing/moving Washing
	Nozzle Position	4 Level Adjustment
	Heating Power	1600w
	Heating Mode	Instant Heat Type
	Safety	Build-in Temperature Sensor,fuse, Leakage Protection Plug
Seating	Temperature	4 Level Adjustment
	Seating Power	40w
	Open/close	Quie And Soft Open/close
	Safety	Build-in Temperature Sensor,fuse, Leakage Protection Plug
Drying	Heating Power	270w
	Warm Air Volume	>4m/s
	Warm Air Level	4-level Adjustable
	Safety	Leakage Protection Devices
Other	Night Light	Led
	Led Screen	Yes
	Switch	Damping Reduction
	Foam Shield	-2/3 available
	Voice Control	-3 available

PART 06 safety

In order to avoid injury and property damage to you and others, please be sure to observe the following safety precautions.

▲ Warning| May result in death or significant danger, please observe


Ⓧ Grounding| Connect the ground wire correctly

▲ Attention| Minor injury or damage may occur, so be careful at all times

● Prohibition| Do not operate prohibited content

● compulsion| The mandatory content of the implementation must be observed

▲ Warning	
● No Disassembly	It is absolutely forbidden to disassemble, repair or modify this product by yourself, which may cause fire, electric shock and other accidents
● No Watering	Do not pour water or detergent on the power plug, which may cause fire, electric shock and other accidents.
● No Kindling	Do not bring a lighted cigarette or burning species, etc. close to the product, which may cause a fire.
● Prohibition	Do not continue to use the product in case of failure, please contact after-sales service personnel for repair. In case of the following situations, please unplug the power plug and close the inlet angle valve. 1. Water leakage from the pipeline and the product; 2. The product temperature is abnormally high; 3. It makes abnormal sound and has peculiar smell; 4. The product smokes. If the product is still used in case of failure, it may cause fire, electric shock, water in the room and other problems. (The normal service life of this product is six years. If it is used beyond the service life, it may cause safety accidents.)
	Do not use water sources other than tap water, which may cause diseases such as infectious dermatitis.
	Do not use loose and unstable power outlets, which may cause fire or electric shock.
	Please use the power socket and wiring appliance within the specified conditions (220V~, 10A, 50Hz socket). Do not use the power supply other than 220V~. If the power exceeds the specified socket, the socket may heat up and cause fire.
	Do not damage the power cord and seat ring connection. 1. Do not damage, do not process, do not heat:2. Do not force bending, do not curl and bundle, do not pull: 3. Do not place heavy objects on the power cord and seat ring connection. If you continue to use the product despite the damage, it may cause fire, electric shock, short circuit and other conditions.
● Compulsion	1. This product belongs to electrical products, please do not place it in the place where water is splashed or high humidity. When using it in the bathroom, please install ventilation fan or ventilation port to keep good air circulation in the bathroom, otherwise it may cause fire or electric shock: 2 If the power cord is damaged, do not disassemble it by yourself. It must be replaced by the manufacturer or its maintenance department or similar full-time personnel. 3. Before inserting the plug of this product, please make sure that the position of the live wire/neutral wire of the socket is the same as that of the plug, otherwise there may be the danger of electric shock

▲ Attention	
 Grounding	Please confirm whether grounding treatment has been carried out. An ungrounded product may be electrocuted in the event of a malfunction or leakage.
● Prohibition	When sitting on the seat ring for a long time, the seat ring temperature should be adjusted to low gear, please pay attention to low temperature burns. When using the toilet, the following persons should adjust the temperature of the seat ring to low gear. 1. Children, the elderly, etc. who cannot adjust the temperature to a suitable level by themselves; 2. Patients, disabled persons, etc. who cannot move freely; 3. People who drink deeply and are overtired due to taking hypnotics (such as sleeping pills, cold medicines, etc.).
	Do not forcibly stretch the water supply pipe of the connecting pipe, as this may cause water leakage.
	Do not lean against the seat cover or press the control panel forcefully, as this may cause malfunction or damage: Forcibly applying force may cause damage to the seat cover and the control panel, resulting in personal injury.
	Do not place vases, cups, cosmetics, medicines and other containers containing liquids or small metal objects above this product. Inadvertent entry into the product may result in fire or electric shock.
	Do not place the product in direct sunlight, otherwise the appearance of the product may be aged and deformed.
	People with disabilities, physical, sensory and intellectual disabilities and lack of experience and common sense (including children) need to use this product under supervision. Do not let children play with this product. This product is not suitable for patients with cardiac pacemaker.
	Do not use the toilet to flush the toilet, urine and toilet paper, otherwise it may lead to toilet blockage, sewage overflow.
	Please do not use gravity impact ceramics, to prevent damage to water leakage.
● Compulsion	Please do not use in the environment below 3°C.
	Install the inlet angle valve firmly, otherwise it will cause water leakage.
	Prevent damage due to freezing. Freezing will cause damage to the inlet hose and the inside of the product, resulting in water leakage.
	When not in use for a long time, please unplug the power plug from the socket and close the inlet valve.
	Please unplug the power plug in case of lightning.
	This product is for toilet use only. Do not use it for purposes other than those described in the instructions for use, otherwise it may cause fire, electric shock, personal injury or malfunction.
	Do not allow contaminants such as urine to touch the smart toilet, otherwise odor may occur or cause malfunction.
	Do not forcibly close the seat ring and seat cover. During the process of turning over the seat cover and seat ring, avoid foreign objects being stuck on the movement track of the cover and ring, otherwise it may cause failure; Be careful not to pinch your fingers when opening and closing the seat ring and seat cover, otherwise it may cause injury.
When performing external maintenance, please pull out the power plug from the socket for safety, otherwise it may cause electric shock.	